

DELUXE TRAVELER ASSEMBLY INSTRUCTIONS

REMOVE YOUR DELUXE TRIM PACKAGE PRIOR TO TRANSPORTING

1. Attach the front corners to the main unit by hooking the top corner brackets into the slots located in the top of the main unit. *Note: The corners are not universal. Notice the hole for the fastener at the bottom of the corner and also at the bottom of the main unit. These must match to allow the fasteners to work properly.* Once the front corners are hung in place use the fasteners that are pre-attached to the frame to complete assembly.



HANG FRONT CORNERS



FASTEN SCREWS

2. Attach the rear corners to the main unit by hooking the top corner brackets into the slots located in the top of the main unit. *Note: The corners are not universal. Notice the brackets mounted on the bottom end of the corners. These must align with the mounting hardware located near the rear bottom wheels.* After the corners have been hung, attach the pre-fastened hardware located near the brackets and tighten.



HANG REAR CORNERS



FASTEN NUTS

3. Have an assistant help you lift and place the top section on the main unit. The message board should face forward. *Note: Make sure that the ropelight leads from the four corners are positioned above the main unit and do not interfere with positioning the top section in place.* Once the top section is resting in place, fasten it to the main unit by inserting (2) 1/2" screws up through the front and rear holes in the lid of the main unit and attach (2) washers and nuts to the top side of each. (These are located in the "Stock-it-Pocket" box).



MOUNT TOP SECTION



FASTEN TOP SECTION

4. After the top unit has been secured, connect the plastic ropelight electrical leads together at each corner.



PLUG ROPELIGHT LEADS TOGETHER

CONNECT MAIN POWER CORDS

5. Once the ropelight connections have been made, plug the power cords for the lighting controller and the Beta-Brite message sign into the duplex outlet on the top of the unit. You are now ready to set your lighting controller (located on the rear side of the upper panel) to your desired mode of chase and also program your message sign.

